



Replacement Parts list

| Ref. No. | Part No. | Description |
|----------|-----------|---------------------------------------|
| 1. | 12910B14L | 14L. Aluminum Air Tank |
| 2. | 12913 B3 | 3" Slotted Barrel w/ 3" Lock Nut |
| 3. | 12912 B3 | 3" Lock Nut |
| 4. | 12950 B3 | 3" W 1.8 O-Ring |
| 5. | 12951 B3 | 3" Wide Screw |
| 6. | 12952 B3 | 3" W 5.33 O-Ring |
| 7. | 12954 B3 | 3" W 3.53 O-Ring |
| 8. | 12953 B3 | 3" Piston-L33mm w/ 2xO-Ring |
| 9. | 12955 B3 | T1.8 Stainless Spring |
| 10. | 12956 B3 | 3" W 10.66 O-Ring |
| 11. | 12919 BS | Safety Trigger Caps |
| 12. | 12919B | Switch Valve w/ O-Ring |
| 13. | 12919 BO | W 2.0 O-Ring |
| 14. | 12920B | Grip-BB |
| 15. | 12921B | Plastic Plug |
| 16. | 12914B | 1.5" Pressure Gauge -10Bar |
| 17. | 12930M | F 1/4" x3 & M 1/4"x1 Connector |
| 18. | 12917B | ASME Safety Valve-8 Bar |
| 19. | 12916B | (6.35 mm) 1/4"PT Intake Valve |
| 20. | 12927 | Universal Connector |
| 21. | 12928 B3 | 3/4"PT x 1/4"PT Male Connector-BB14L3 |
| 22. | 12921 B3 | Plugs |

Bead Bazooka® Care

For best performance, please add silicone oil or air tool oil to the RAR Valve every months by performing the following steps:

- 1.Remove the barrel.
- 2.Push the piston down.
- 3.Apply silicone oil or air tool oil to the upper part of the piston.
- 4.Apply the oil to the edge of the piston. (Black O-Ring)
- 5.Press the piston repeatedly until the oil flow into the interior of valve.



Care and Maintenance :

- Indoor use only
- Avoid this product under the sun or heat exposure
- Often maintenance can increase the time usage of the product
- Use often, please maintenance weekly
- In order to avoid parts damage, do not use this product in the rain
- Recommend using silicone oil for maintaining piston, in order to avoid damage to the parts.

WARNING:

- COMPRESSED AIR IS DANGEROUS - ALWAYS WEAR EYE AND EAR PROTECTION. ALWAYS FOLLOW THE INSTRUCTIONS GIVEN ABOVE.
- THE BEAD Bazooka® IS A TOOL FOR THE TIRE INDUSTRY AND SHOULD NEVER BE USED OTHERWISE
- The product should operate by professionals.
- Never allow the nozzle to point in the direction of a person
- Please vent the rest of air after use.
- Do not try to disassemble or modify the product.
- Please Keep away from children



Repair and Troubleshooting :

- Read the instructions and check BEAD Bazooka® to see whether there are missing parts or damaged parts.
- If the Bead Bazooka® can not be used, please contact the store for repair.

Note:



For other trouble shooting issues and maintenance suggestions for your new Bead Bazooka®, as well as tips for problematic tires, please log on to www.gaithertool.com